


Inspection and Maintenance

■ Example of Daily inspection (pre-operational) and Simple inspection and services written in the Owner's Handbook (equipped in the vehicle) <e.g. LDT>

Daily inspection (pre-operational) Owner's Handbook

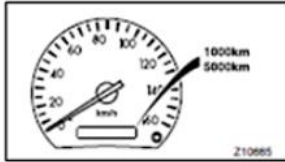


1 New vehicle inspection

After you have driven the first 1,000 km (500 miles) and 5,000 km (3,000 miles), your vehicle requires a special inspection and adjustments to compensate for the initial settlement of various parts. When these distances have been reached, have your vehicle inspected by your nearest authorized MITSUBISHI FUSO distributor or dealer by showing them the separate "Service Booklet".

2 Pre-operational check

Make a habit of checking your vehicle at the start of every day's operation. This will ensure safe and comfortable operation. □ P. 12-22

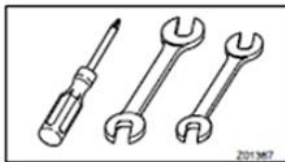

3 Periodic Inspection

• Periodic inspection is based on either the distance traveled (odometer reading) or period of use (months/years). Always have the recommended inspections and services performed as scheduled in accordance with the separate "Service Booklet".

• Mitsubishi gives a list of parts (brake hoses, fuel hoses, oil seals in brake related components, etc.) that should be replaced at regular intervals in order to ensure safe operation. Though they have a direct bearing on safe vehicle operation, it is difficult to detect deterioration of these parts through ordinary inspections. Rubber hoses, either for the brake system or the fuel system, in particular should be regularly inspected and serviced. Since they are liable to swell, chafe or crack over time, it is necessary that they be inspected by technicians according to the "Periodic inspection schedule" section, and that they be replaced at regular intervals for safety's sake. The hoses must be replaced immediately whenever they are worn or broken. For further details, refer to the "Service Booklet".

Simple inspection and services Owner's Handbook

12. Simple inspection and service 12. Inspections et travaux d'entretien simples 12. Inspecciones y servicios simples

General precautions for servicing the vehicle	Précautions à observer pour les travaux d'entretien	Precauciones generales para el servicio del vehículo	12-0
Onboard tools	Outillage de bord	Herramientas del vehículo	12-8
To reach the engine access opening	Ouverture et fermeture d'accès au moteur	Apertura y cierre de la boca de acceso al motor	12-12
Tilting the cab	Basculement de la cabine	Inclinación de la cabina	12-14
Pre-operational checks	Contrôles avant de prendre le route	Comprobaciones previas a la operación	12-22
Greasing	Grasage	Engrase	12-24
Oil and fluids	Huiles et autres fluides	Aceites y fluidos	12-28
Flour service filter	Cartridge des filtres	Cartucho del filtro	12-78
Draining water from water separator	Purge de l'eau dans le séparateur d'eau	Desage del agua del separador de agua	12-102
Draining water from fuel filter	Purge de l'eau du filtre à carburant	Desage del agua del filtro de combustible	12-102
Engine coolant - check and replacement	Liquide de refroidissement - contrôle et remplacement	Refrigerante del motor - inspección y reemplazo	12-106
Wipers - check and adjustment	Courroies trapézoïdales - contrôle et réglage	Correas en V - inspección y ajuste	12-138
Steering wheel - check	Vitres de direction - contrôle	Volante de dirección - inspección	12-148
Service brakes - check and adjustment	Freins de service - contrôle et réglage	Freios de servicio - inspección y ajuste	12-150
Parking brake - check and adjustment	Frein de stationnement - contrôle et réglage	Freio de estacionamento - inspección y ajuste	12-158
Clutch - check	Embrayage - contrôle	Embrague - inspección	12-164
Tires - check	Freins - contrôle	Neumáticos - inspección	12-168
Tire replacement	Changement d'une roue	Control de neumáticos	12-172
Wheel nuts - check and torque setting	Entree de roue - Contrôle et serrage	Tornillos de rueda - inspección y reapriete	12-184
The motor	Perforation des pneus	Perforación de los neumáticos	12-186
Spare tire	Roue de secours	Reserva de neumático	12-200
Wiper blades - replacement	Escobilles d'essuie-glace - remplacement	Respaldo del limpiaparabrisa - reemplazo	12-208
Windshield washer - fluid level check and refilling	Lavage de pare-brise - contrôle du niveau de liquide de lavage et remplissage	Lavador del parabrisa - inspección del nivel de fluido y llenado	12-210
Battery - check	Batterie - contrôle	Batería - inspección	12-212
Refrigerant - check	Fluide - Contrôle	Refrigerante - inspección	12-220
Air filter - cleaning	Filtre à air - nettoyage	Filtro de aire - limpieza	12-222
Cleaning your vehicle	Nettoyage du véhicule	Limpieza de su vehículo	12-228
Washer - cleaning	Entretien d'un accessoire d'entretien - nettoyage	Manifiestador - limpieza	12-236
Lamps - inspection for dirt and damage	Lumière - Contrôle de propreté et de bon état	Lámparas - inspección por suciedad y daño	12-240